



TV Celeb-Birdies



1-800-807-1030

www.birdhousespycam.com

Birdhouse Spy Cam

- Night Owl, **Infrared** nest cam for inside bird, squirrel and bat houses.
- See what's going inside day and night.
- Easy setup. Just mount, run cable to house, and connect.
- Plugs into RCA (audio-in, video-in) ports on TV, VCR, or Computer.
- Complete with 100-foot, Plug-&-Play cable. 100' Extensions available.


Setup is as easy as 1-2-3 . . . 4

- 1) If you did not buy a birdhouses with camera installed, simply attach the TV Celeb-Birdies Spy cam into the roof of your own bird, squirrel, or bat house. Use the enclosed plastic clips to secure the cord along side the house. Six Infrared diode emitters provide plenty of night for day and night viewing.
- 2) Aim and focus your TV Celeb-Birdies Spy Cam, by loosening the set screw beneath the lens, twist lens in or out, and retighten screw. Cameras already installed in birdhouses have been pre-focused. **STOP! Before proceeding with installation plug the camera in and test it in the house to make sure you have an image. Works? OK, now go ahead and hang the birdhouse.** Now, run the 100' Plug-&-Play cord into the house. It's strongly recommended that the cord be run where it will be protected as much as possible from foot traffic and ground moisture. Excellent protection is afforded by sliding the cord through an appropriate length of 1/2"-3/4" PVC pipe or plastic electrical conduit, taking care that the ends of the pipe are blocked to keep water out.
- 3) Plug the color coded video and audio plugs into their respective Video-in (yellow) and Audio-in (white) sockets on your TV, VCR, or computer.
- 4) Plug the power supply's jack into the power socket on the cable and plug into any 120V AC outlet.

As with any electronics, it is recommended that the camera and its IR diodes be turned off when not in use. Camera is for use only inside birdhouses or other sheltered areas. Do not expose to rain, snow, or other moisture.

Most televisions will automatically switch to the monitor mode, but some may require you to switch to channel 3 or 4. On older models it may be necessary to go to the television's setup menu and switch the set to "Monitor."

If your television does not have RCA ports, don't despair. Just connect the camera through the VCR's video and audio ports. Set the TV to channel 3 or 4 (depending on the switch setting on the back of your VCR) and make sure your VCR is on the video input channel (not Ch. 3 or 4). This is the specially designed channel for viewing RCA inputs. Your remote will usually have a button to access this channel. It could be labeled Video, Video In, Input, AUX, A/V, Game Ch., Alternate Ch., Line, Line In, or something similar.

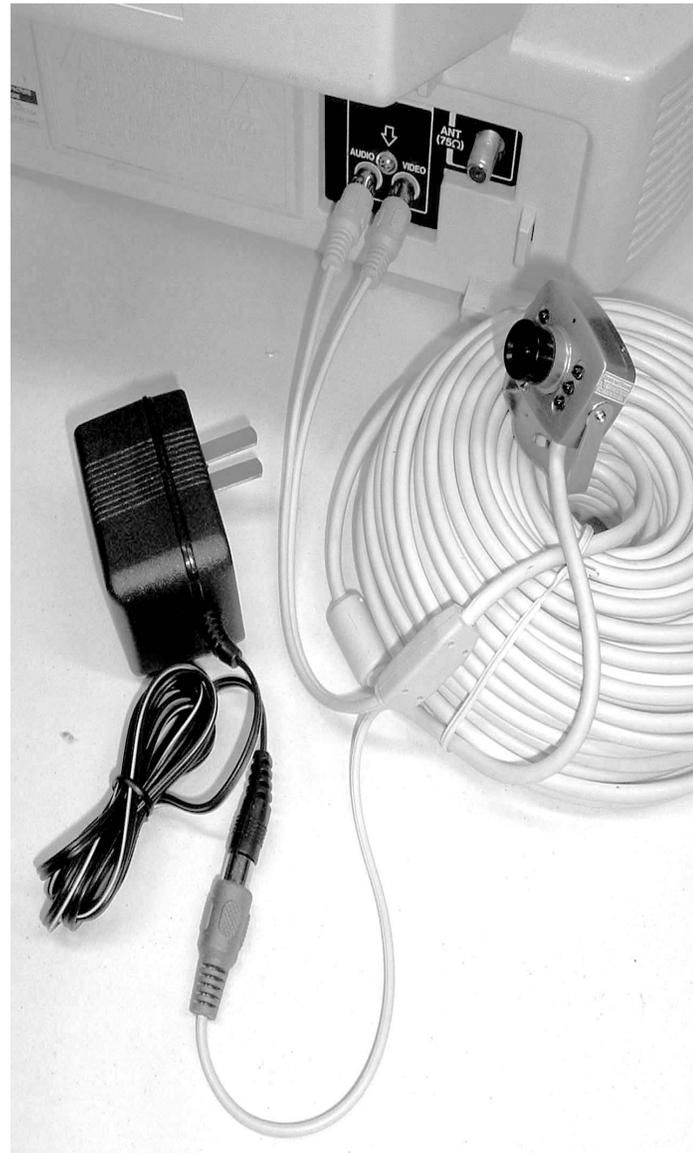

Some remotes access this channel by programming 00, or scrolling down past channel 2. You may have to consult your VCR manual to find this channel. Make sure you are in VCR mode by pressing the TV/VCR button on the remote. If everything is connected properly, you will get an image on the TV and also be able to record the activity.